HUROM
SLOW JUICER

Instruction Manual

- Please read the instructions carefully before using.
- Please keep the user's guide where it is easily accessible.
- Design and product development may be upgraded without a public notice.

http://www.slowjuicer.com

HUROM USA, Inc.

HUROM SLOW JUICER USERS

The HUROM Slow Juicer is a completely different mechanism where fresh juice comes from squeezing rather than grinding. HUROM Slow Juicer is a newly developed patent product which is capable of making soy milk, vegetable extracting, fresh squeezed fruit juice, etc.
LSTS (Low Speed Technology System) squeezes instead of grinding which allows the juice to maintain it's pure color, natural taste, nutrients and vitamins.

For better use and maintenance of the product please follow the instructions carefully.

Please refer to the user's guide when you are having technical diffiiculties or unsure of the usage of this product. HUROM USA is not liable for any damages or injuries that may occur due to the lack of understanding of the user's guide.

HUROM SLOW JUICER TABLE OF CONTENTS

Introduction ---------- 01
Attachment Listing ---------- 02
Safety Precautions ---------- 03
Assembly Instruction (type 1) ---------- 06
Assembly Instruction (type 2) ---------- 07
How to use slow juicer ---------- 10
Warning while operating ---------- 11
How to disassemble and clean ---------- 12
Before requesting for repair service ---------- 13
Product Specification ---------- 14

Attachment Listing

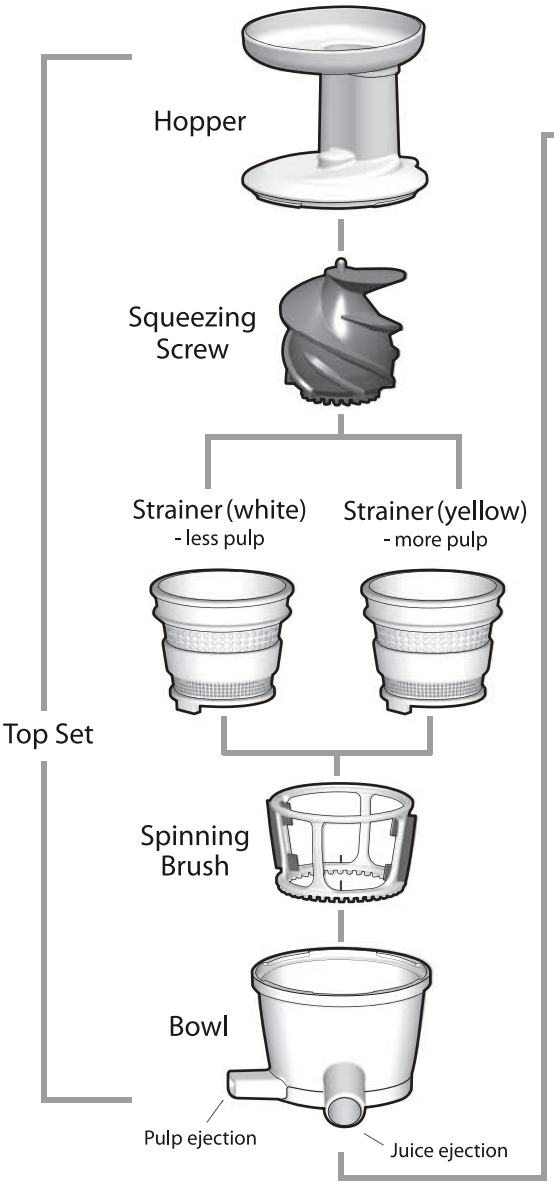

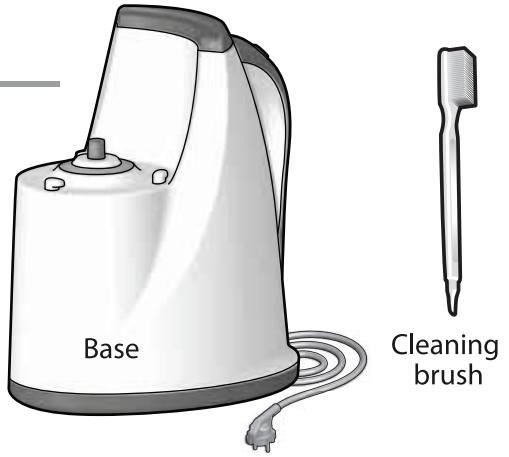

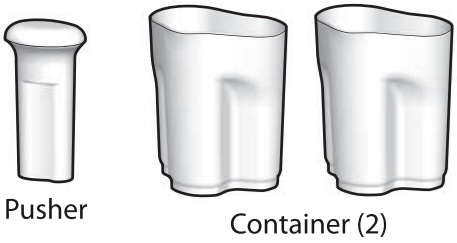

IMPT

As shown below, the hopper edge must point to "close" sign on the base in order for the machine to operate properly.

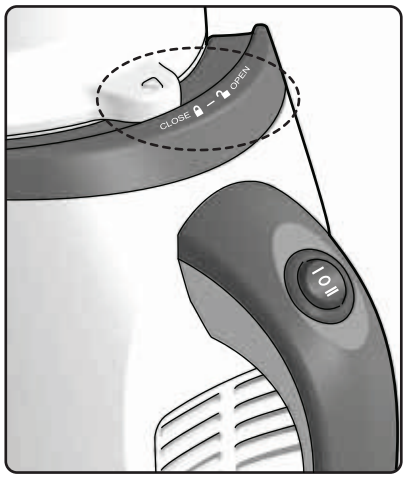

Notice

Do not pre-operate before inputting materials or Do not operate with an empty bowl.

Safety Precautions

- Please read carefully before using.
- Please follow instruction to aviod injuries.

Warning sign

Warning : violating this sign may lead to serious injury or even death.

Caution : violating this sign may lead to serious damage to the product.

example

Sign (danger in health)

Sign (Must not do)

Sign (Restrictions)

Warning

Do not plug or unplug the electrical plug with wet hands.

- Can cause electricution.

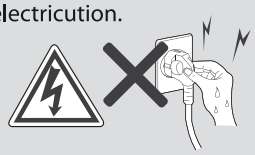

Please plug in your outlet properly.

- Not doing so may cause fire damage.

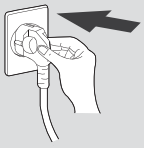

Do not use other than 110 volt power.

- Can cause electricution, fire, or product damge.



Do not force plug into outlet, ensure plug is away from any heat source and is not bent or, twisted in anyway.

- May cause electricution, or fire.

⚠ Warning

Do not disassemble the base. Please consult with repair techni -cian for trouble shooting.

- Violating these instructions may cause electricution or fire.
- All repairs must be done at your purch -ased retail store.

Stop use when the electrical cord is damaged or loose.

- Violating these instructions may cause electricution or fire.

Do not put any unknown substance into the machine.

- Violating these instructions may cause electricution or fire.

Keep the base dried at all times.

- Violating these instructions may cause electricution or fire.

Keep away from children or any personnel who aren't familiar with the usage of this product.

- Violating these instructions may cause injuries or damage to the product.

Do not disassemble any parts while operating the machine. Do not put in any unknown objects while operating the machine.

- Violating these instructions may cause injuries or damage to the product.

⚠ Caution

Do not operate when the hopper is loose.

- Violating these instructions may cause electrocution or fire.

Do not unplug the outlet when there is a gas exposure, instead open all windows for air ventila -tion.

- Violating these instructions may cause electrocution or fire.

Operate on a flat and steady surface.

- Violating these instructions may cause injuries or damage to the product.

Do not put in any objects that are not instructed inside the machine.

⚠ Caution

Do not remove while operating.

- Violating these instructions may cause injuries or damage to the product.

Should the squeezing screw jam, put in reverse for 2-3 seconds then try operating again.

- Violating these instructions may cause injuries or damage to the product.

Do not disassemble while operating.

- Violating these instructions may cause injuries or damage to the product. Please disassemble after the power is off.

Do not use anything other than the pusher.

- Violating these instructions may cause injuries or damage to the product.

Do not use more than 30 minutes continuously.

- It will overheat the motor.

Do not submerse the motor in water.

- Violating these instructions may cause injuries or damage to the product.

After use, remove the plug from the outlet.
Do not use cord to remove plug.

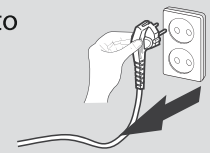

While using, if there is any unusual odour(heat, smoke) stop use imme -diately and contact the nearest retail center where you purchased the product.

The base weighs 12.125 lbs. Please lift the unit with two hands.

- Violating these instructions may cause injuries or damage to the product.

Do not rinse with water that is warmer than 176 degrees F.

- Violating these instructions may cause injuries or damage to the product.

Assembly instruction - Type ①

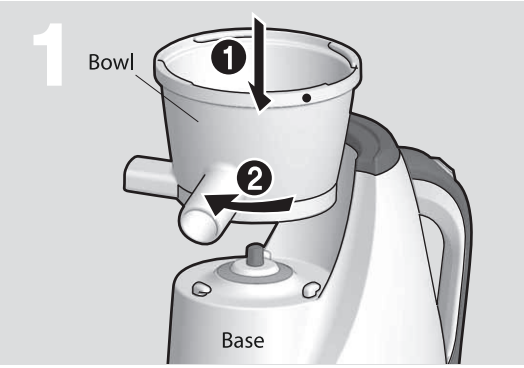

1. Assemble the bowl on the base.

① Make sure the bowl is all the way into the shaft of the base.

② Twist the bowl to close.

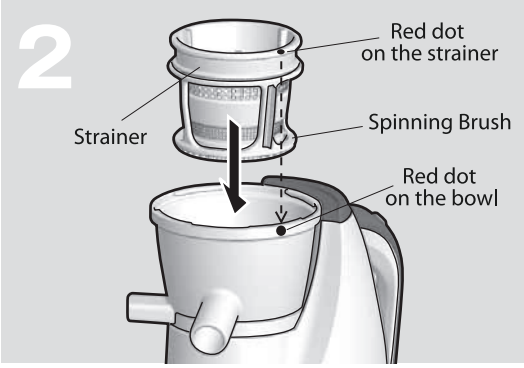

2. Assemble the strainer + spinning brush into the bowl.

① Make sure the red dot and the black arrow is aligned.

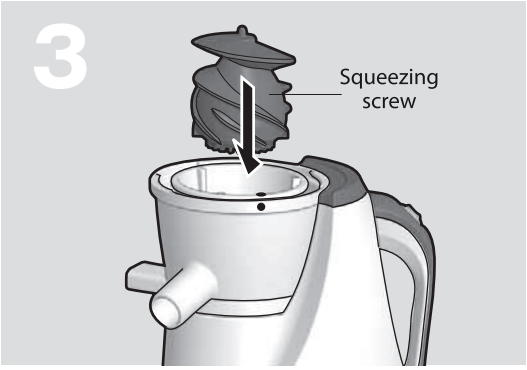

3. Place the squeezing screw in the center of the bowl.

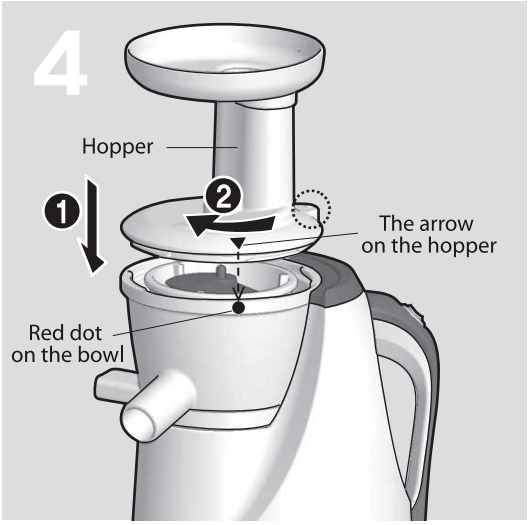

4. Assemble the hopper onto the bowl.

① Make sure the arrow on the hopper and the red dot on the bowl is aligned.

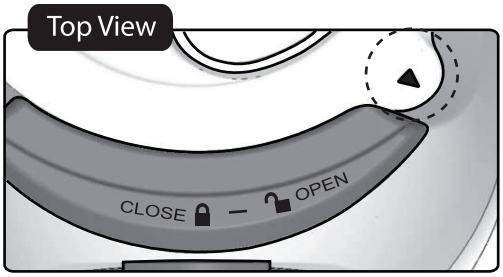

② Make sure the arrow on the hopper is pointing to closed sign on the base.

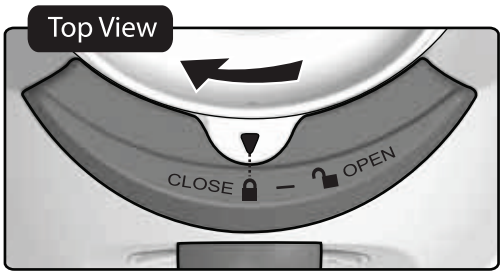

Reverse the step carefully when disassembling.

Assembly instruction - Type ②

1

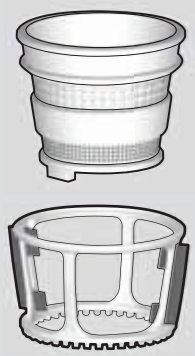

Place the strainer into the spinning brush.

2

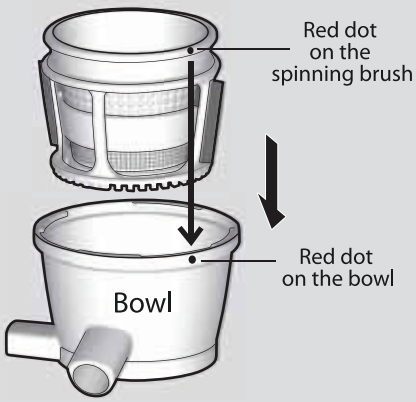

Place the strainer + spinning brush into the bowl.

① Make sure the red dot on the strainer and the red dot on the bowl is aligned.

3

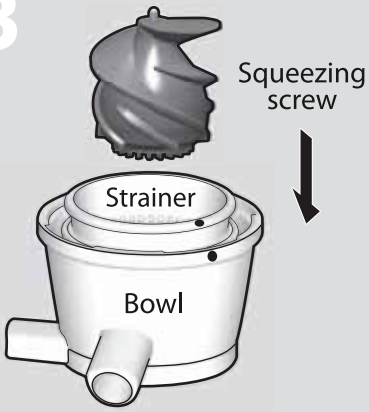

Push in the squeezing screw into the strainer.

Assembly instruction - Type ②

4

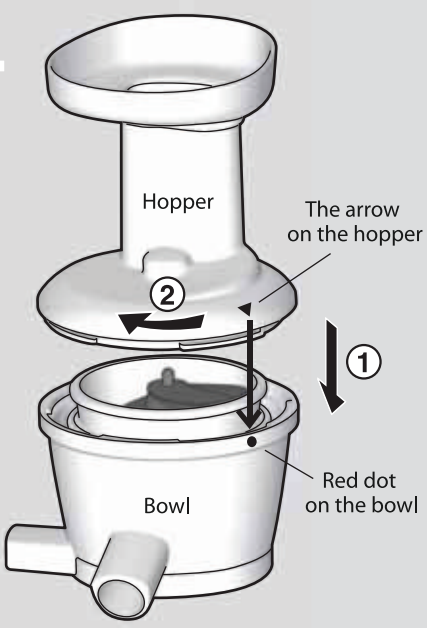

Assemble the hopper onto the bowl.

① Make sure the arrow on the hopper and the red dot on the bowl is aligned.
② Make sure the arrow on the hopper is pointing to close sign on the base.

5

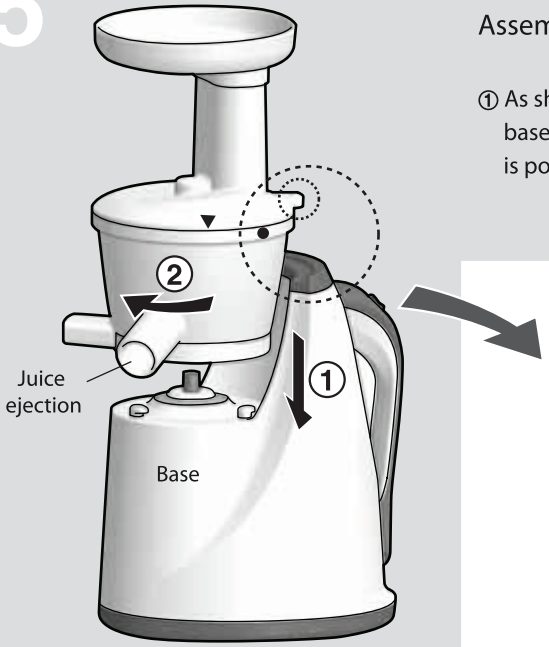

Assemble the entire Top Set onto the base.

① As shown below, assemble the bowl onto the base and twist the bowl so that the hopper edge is pointing to "close" sign.

OPEN

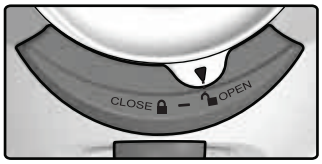

CLOSE

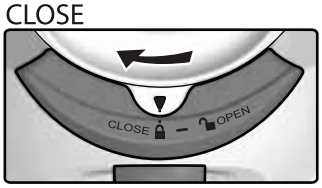

Assembly instruction - Type ①, ②

6

Must connect the power cord.

Place containers under both ejections.
(Juice & pulp ejection)

Underneath the bowl, there is a yellow rubber pad which allows all the juice to only discharge from the fresh juice ejection.
The rubber pad is removable, Simply grab onto one side of the rubber pad and pull out.

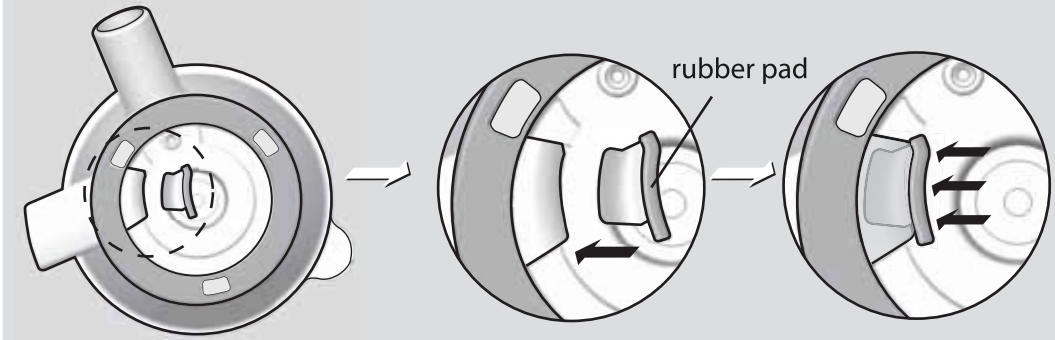

How to use HUROM slow juicer

1

The machine has three(3) settings.

- "On" starts motor, Start making juice.
- "Rev" is reverse. Only use when something is stuck and you need to unclog.
- "Off" is at center position. This allow the machine to turn off.

2

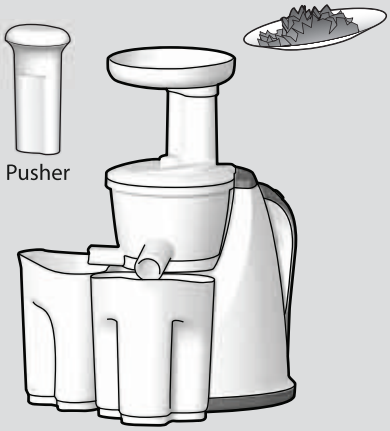

Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the pusher.

Please remove any hard seeds before using.

3

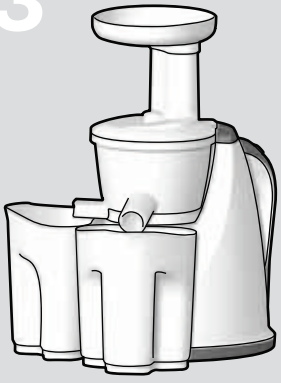

Turn off the machine after using.

Please dry your hands before touching the power switch.

Warning

Any unused juice should be refrigerated.

Do not operate with wet hands.

Do not pre-operate before inputting materials or Do not operate with an empty bowl.

Warning while operating

Do not use longer than 30minutes at a time.	Violating the warning may cause serious damage to the product.
Do not use anything as a pusher (fork , chopsticks, spoons, etc) other than the pusher itself.	Violating the warning may cause serious damage to the product.
Remove any hard seeds.	Violating the warning may cause serious damage to the product especially the screw.
Do not operate with wet hands.	Violating the warning may cause serious injuries or electrocution.

When the machine is stuck and not operable, Please…

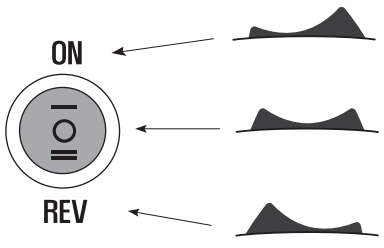

Turn off the machine and put it reverse for few seconds then try operating again.

When reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassemble, please try turning on the machine.

How to disassemble and clean

1 Turn machine "Off".

2 Twist the hopper to unlock by grabbing the two ejections. Make sure the arrow is aligned with the open sign before pulling off the bowl.

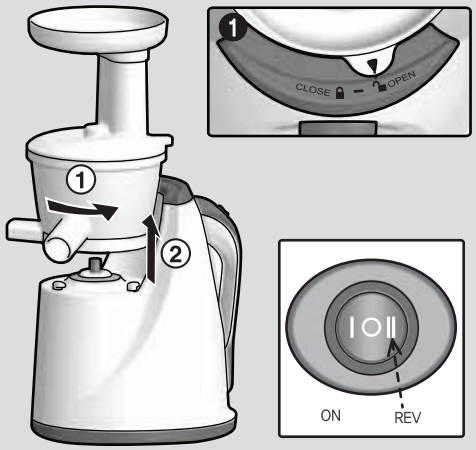

3 Order to disassemble.

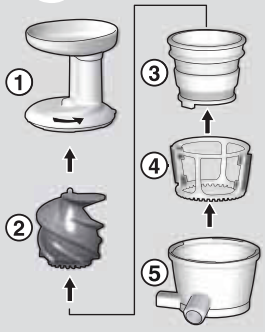

1. Hopper
2. Squeezing screw
3. Strainer
4. Spinning brush
5. Bowl

4 Use the brush to clean thoroughly after operating.

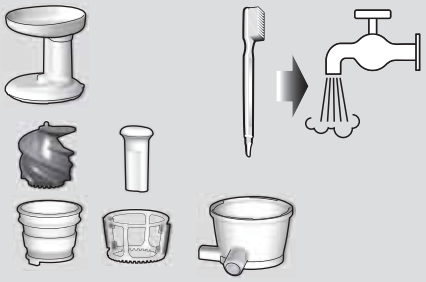

Do not use metal sponge to clean, it will damage the machine.

Do not use dishwasher to clean.

5 Do not rinse the base with direct water, use dry towel or wet towel to clean.

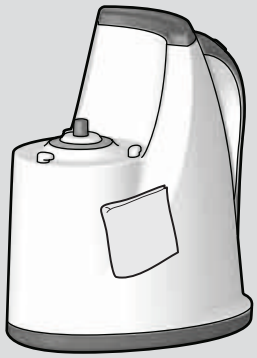

6 Please dry the attachments after cleaning.

Before requesting for repair service

Please check when

Machine does not operate.	a. Check if the power cord has been plugged in correctly. b. Check if the assembly has been done correctly.
The juice does not disch -arge sufficiently or there is juice discharging from the pulp ejector.	a. Check if the rubber pad has been installed correctly. b. Check if the fruits, vegetables, etc is fresh material.
Machine is stopped.	a. Check if there are too much materials put in at once. b. Check if the hard seeds are removed. - Turn off the machine and try the reverse button for 2-3 seconds then try operating again.
Making "squeaking" noise when making juice.	This sound is perfectly normal when making juice. It is the sound of juice being squeezed by the squeezing screw.
The machine shakes.	This shaking is perfectly normal. The motor is working properly.

Product Specification

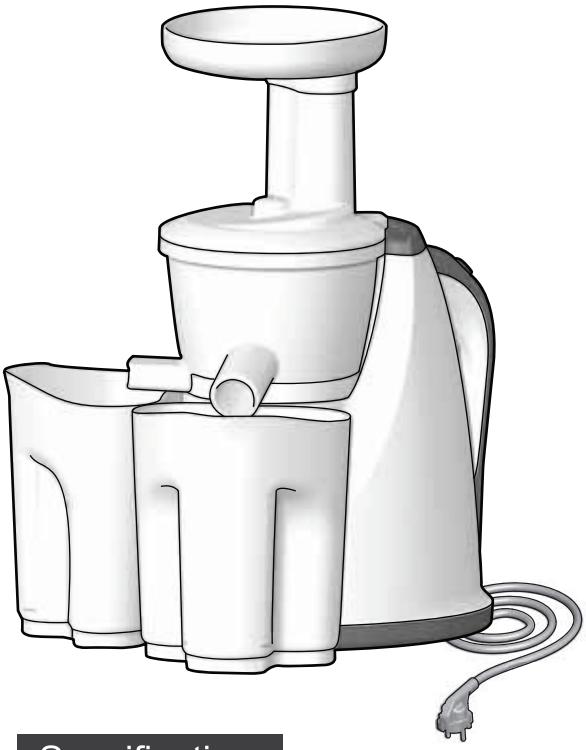

Specification

Product Name		HUROM Slow Juicer
Model Name		HU-100
Voltage		120 V
Frequency		60Hz
Power Consumption		150w
RPM		80 rpm
Electrical cord length		4.592 ft +
Motor		Single –Phase induction
Weight		11.466 lbs
Dimensions	Width	6.81 in
	Length	9.84 in
	Height	15.83 in
Standard usage time		Less than 30 minutes continuously

HUROM
SLOW JUICER

Customer Service (Service a la clientele)

USA : http://www.slowjuicer.com (310–515–7107)

CANADA : http://www.eurodib.com (888–956–6866)

HUROM USA, Inc.
20280 South Vermont Ave. Suite #200 Torrance CA 90502
Office : 310–515–7107 Fax : 310–515–0650